



Attention! Before assembling, please ensure back support bar bolts are tightened.



STEP 1

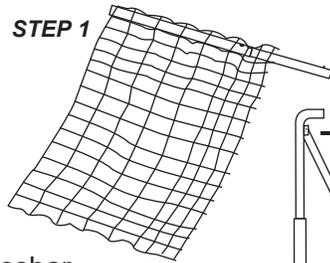

STEPS 2 & 3

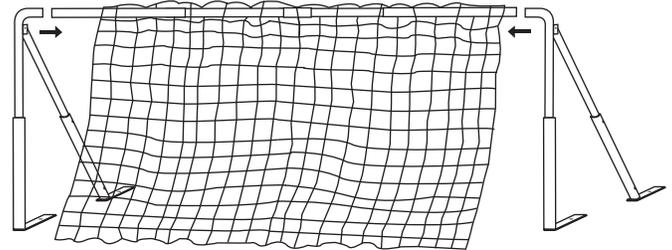

STEPS 4 & 5

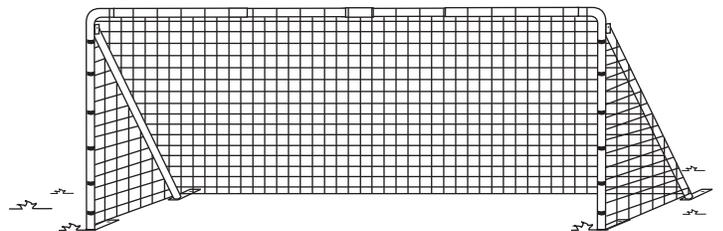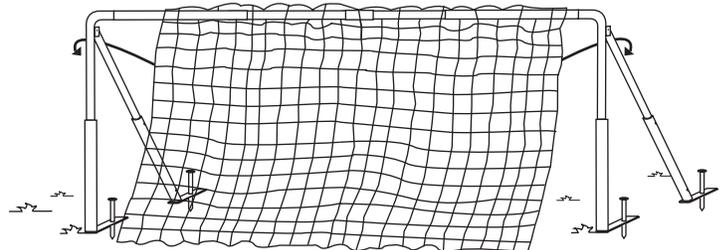

1. Weave net through one piece of crossbar, then assemble remaining crossbar pieces.
2. Sleeve out all Pre-Assembled Parts by pulling until push-button clicks into position.
3. Connect left and right side post to crossbar.
4. Anchor both left and right side post bases. Follow by anchoring both back support bases.
NOTE: Make sure side posts are 90° perpendicular to the ground.
5. Drape net over back support bars and attach to side posts with included net ties.

SAFETY INSTRUCTIONS Check for structural integrity and proper connecting hardware before every use. Replace damage or missing parts or fasteners immediately. Securely anchor or counterweight movable goals at ALL times. Always instruct players, managers, coaches, trainers, teachers, maintenance and all other personnel who might come into contact with the goal on the safe handling of and potential dangers associated with movable soccer goals. Always exercise extreme caution when moving goals and allow adequate manpower to move goal of varied sizes and weights. Movable soccer goals should only be moved by authorized and trained personnel. NEVER allow anyone to climb on the net or goal framework. Movable soccer goals should only be used on LEVEL fields, NEVER on a slope or hill area. Remove nets when goals are not in use. Most of the tipover injuries occurred when goals were unattended. Anchor or chain one goal to another, to itself in a folded down position, or to nearby fence posts, dugouts, or any other similar sturdy fixture when not in use. If this is not practical, store movable soccer goal in a place where children cannot have access to them. Fully disassemble goals for seasonal storage.